

CabinetNow Installation Guide

Featuring Blum TANDEM plus BLUMOTION Undermount Slides

Soft close, full extension guides sold in pairs, 8 screws per pair. Refer to [Blum Tandem Plus Blumotion Installation Guide](#) for precise details.

Tools Needed

- Blum Tandem Plus Blumotion 563H/563 runners
- Blum locking devices (T51.1801 or T51.1901)
- Mounting screws (#6 wood or system screws Euro Screw 6.3mm x 13mm)
- Screwdriver or drill
- Measuring tape
- Pencil
- Level




Euro Screw 6.3mm x 13mm

Step 1: Prepare Your Drawer and Cabinet

- Make sure your drawer box fits your cabinet opening correctly.
- Inside drawer width = Cabinet opening width minus 1-11/16" (42 mm)
- Leave 1/4" (6 mm) space at the top and 1/2" (14 mm) clearance underneath the drawer.

Pro Tip: Accurate measurements mean smoother movement later.

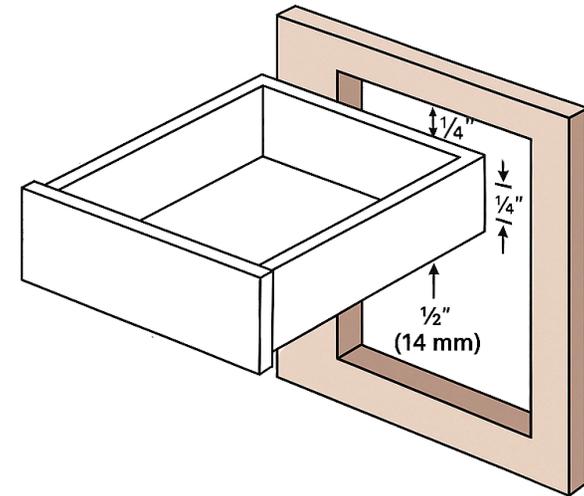



Need help calculating? Refer to our [Drawer Box Measuring Guide](#) for exact measuring instructions.



Step 2: Install the Runners

- Mark placement: Measure 1-½" (37 mm) up from the bottom inside of your cabinet. This is where the top of your runner will sit.
- Attach runners: Use at least two screws per runner (using the elongated holes). Keep them level on both sides.

Adjust if needed: Loosen screws and slide runners forward or backward slightly for perfect alignment, then tighten fully.

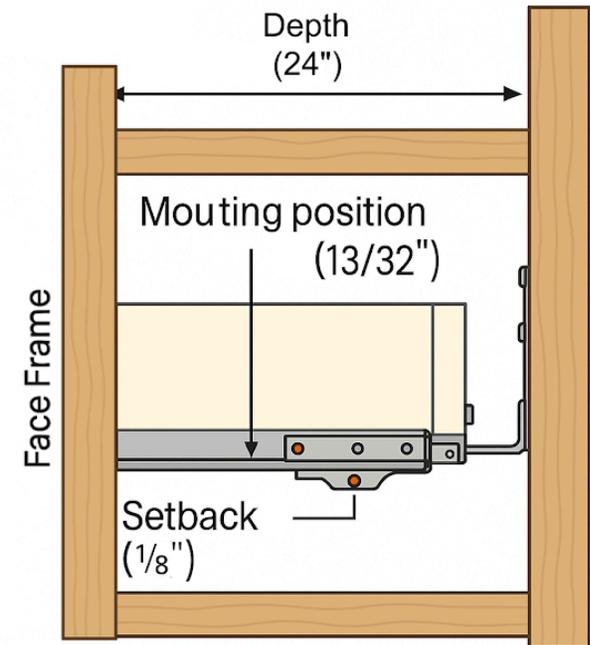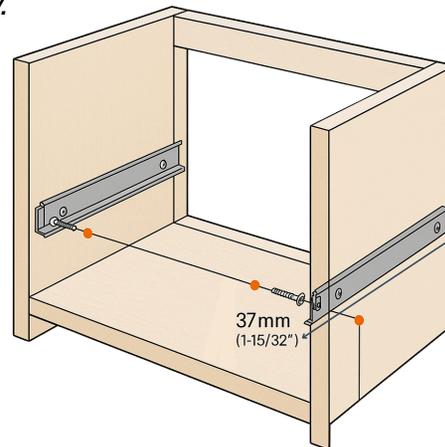


Note:

Image shown for 563H5330B (21") drawer slide length. Specifications and dimensions are representative of TANDEM plus BLUMOTION 563 series slides, available in 12", 15", 18", and 21" lengths.

Step 3: Attach the Locking Devices

- Position the locking devices underneath the front of the drawer box.
- Secure them using the pre-drilled holes (if not pre-drilled, measure and drill pilot holes using a 2.5 mm bit).
- Each drawer needs a left and right locking device.

Optional: If using depth-adjustable locking devices (T51.1901), you can fine-tune how far the drawer front sits out from the cabinet later.

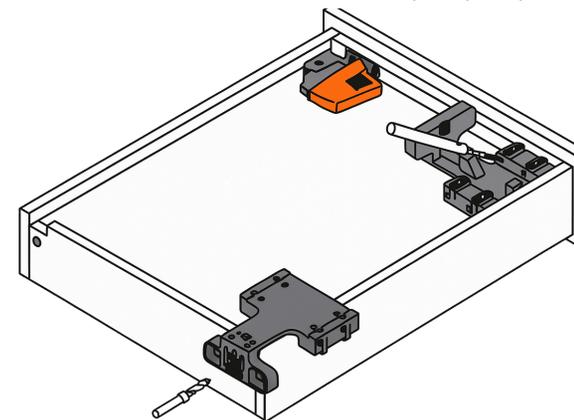


Refer to [Blum Tandem Plus Blumotion Installation Guide](#) for precise details.



Step 4: Mount Rear Hooks (if required)

If your setup includes rear hooks or brackets (common for face-frame cabinets):


1. Attach them at the back of the cabinet to hold the runners securely.
2. Ensure both brackets are level and aligned with the runners.

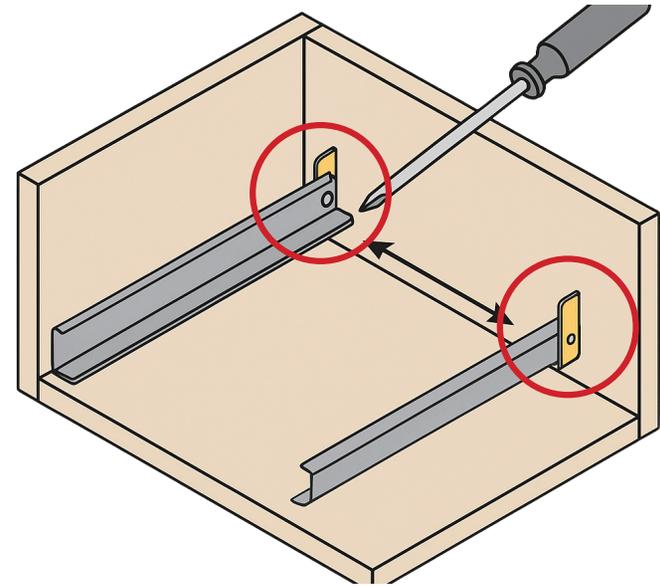

Step 5: Insert the Drawer

- Extend the runners fully from the cabinet.
- Set the drawer on top of the runners.

Push the drawer closed until you hear a click — that means the locking devices have engaged automatically.

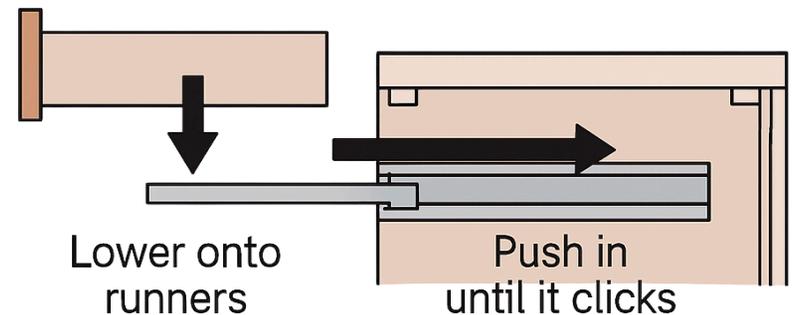

Refer to [Blum Tandem Plus Blumotion Installation Guide](#) for precise details.



Step 6. Adjust the Drawer for Perfect Fit

Once your drawer is in, you can make quick, tool-free adjustments using the orange tabs and levers on the Blum hardware:


Adjustment Type	How To Adjust	Range
Side-to-side	Rotate the orange dials under the front corners (both sides equally).	$\pm 1/16$ " (1.5 mm)
Height	Push the orange tab up and back to raise the drawer front.	Up to $1/8$ " (3 mm)
Tilt (front/back)	Turn the lever at the rear of each runner to tilt the drawer face.	Up to $3/16$ " (5 mm)
Depth (optional)	Turn the screw on T51.1901 devices to move drawer front outward.	Up to $3/32$ " (2.5 mm)

Tip: Adjust slowly and check drawer alignment after each tweak.

Step 7. Drawer Removal (If Needed)

1. Fully open the drawer.
2. Squeeze both orange release levers underneath the drawer front.
3. Lift slightly and pull straight out.

To reinstall, just slide the drawer back in until it clicks.

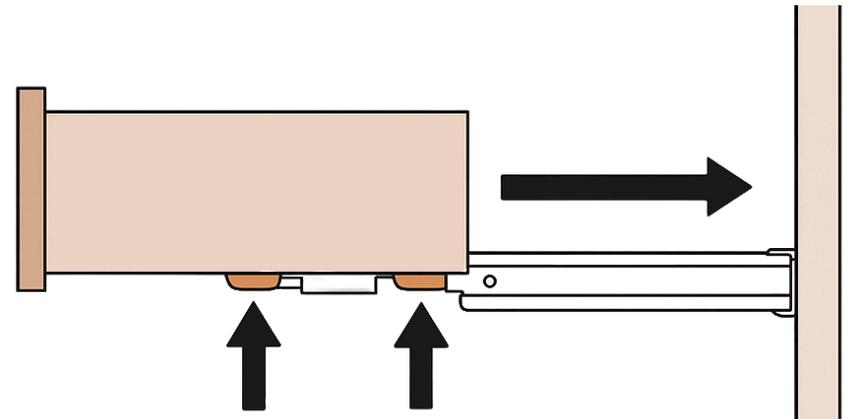

Refer to [Blum Tandem Plus Blumotion Installation Guide](#) for precise details.



Step 8: Final Check

- Ensure the drawer slides smoothly and closes softly.
- Confirm all screws are tight and the drawer front is flush with the cabinet face.
- Make sure everything is leveled evenly.



Step 9: Confirm Before You Order

If you need help determining your slide type or calculating box dimensions, or installing our design team can help you verify everything before you order.

 info@cabinetnow.com  **1-855-669-5222**

That's It!

You've installed your Blum Tandem Plus Blumotion Drawer Slides — enjoy the smooth, quiet close!

Refer to [Blum Tandem Plus Blumotion Installation Guide](#) for precise details.

