


CabinetNow Installation Guide

Featuring Salice Futura Undermount Slides

Salice Futura undermount slides are full-extension, soft-close glides that provide a smooth, silent motion and professional finish. They're sold in pairs and compatible with both 1/2" and 5/8" side drawer boxes. Refer to [Salice Futura Undermount Installation Guide](#) for precise details.

What You'll Need

- Salice Futura Undermount Drawer Slides (1 pair per drawer)
- Salice front locking devices
- Rear brackets or hooks (for face-frame cabinets only)
- #6 x 1/2" or #6 x 5/8" flat-head screws
- Drill with 2.5 mm and 6 mm bits
- Measuring tape and pencil
- Level

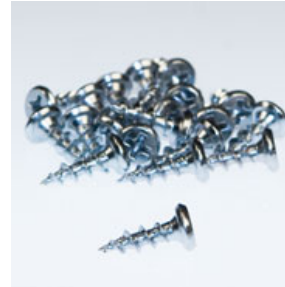

Drawer Guide Screws 1/2"




Drawer Guide Screws 5/8"

Step 1: Measure and Prepare the Drawer

Before installing, ensure your drawer box fits your cabinet opening properly.

- Drawer width: Cabinet opening width minus 42 mm (1-11/16")
- Rear notch depth:
 - Standard soft-close: 33 mm (1-5/16")
 - Push-to-open: 82.5 mm (3-1/4")

Tip: Keep drawer bottoms perfectly square and level for smooth sliding.

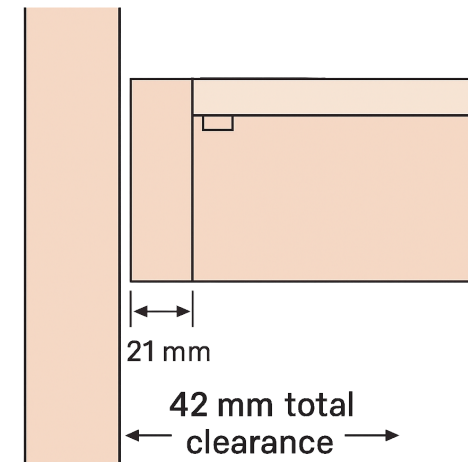


Need help calculating? Refer to our [Drawer Box Measuring Guide](#) for exact measuring instructions.



Step 2: Install the Runners

- Measure 10 mm (3/8") up from the cabinet bottom and mark where the runners will sit.
- Attach each runner with your flat-head screws — two at the front and two toward the back.
- Make sure both runners are perfectly level.


Note: The oval slot in each runner allows for a small in/out adjustment (about ± 4 mm).

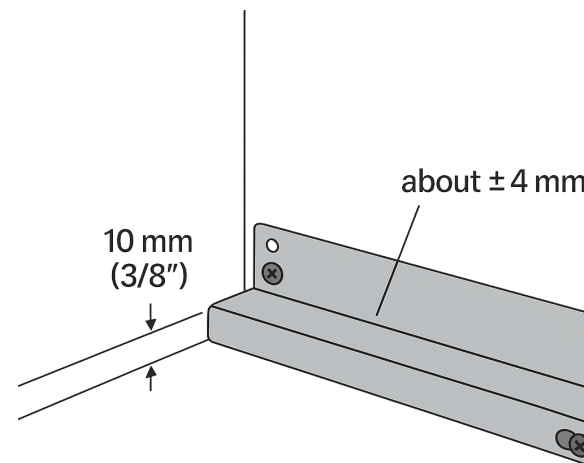

Step 3: Mount Rear Brackets (for Face-Frame Cabinets)

- Attach the brackets to the back of your cabinet.
- Slide the rear of the runners into the bracket holes.
- Check that the runners are level and aligned with the cabinet opening.

Frameless cabinets can skip this step — their runners attach directly to the side walls.

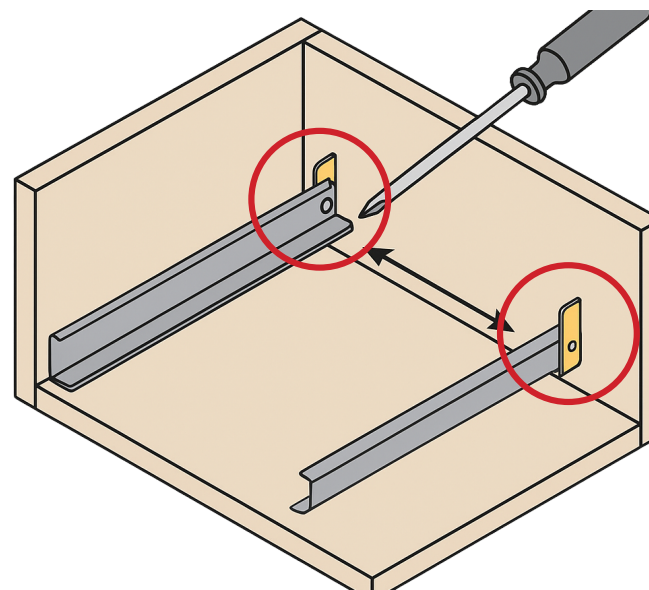


Refer to [Salice Futura Undermount Installation Guide](#) for precise details.



Step 4. Insert the Drawer

- 1. Extend both runners fully.
- 2. Lower the drawer box onto the runners so the rear hooks engage with the notches.
- 3. Push the drawer straight in until you hear a click.

That click means the locking devices have properly engaged.

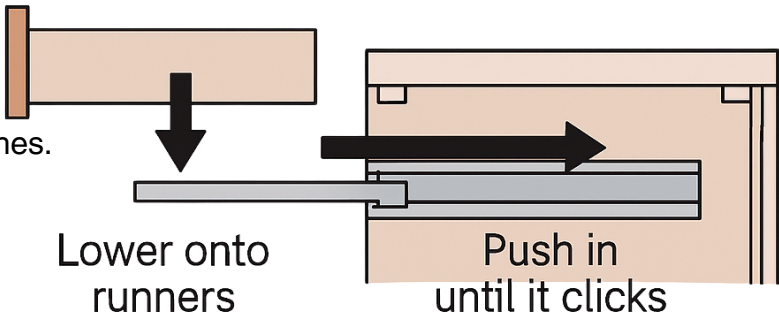

Step 5. Adjust for a Perfect Fit

Fine-tune the drawer alignment using built-in adjustment screws:

Adjustment Type	How To Adjust	Range
Height	Turn the screw on each locking device.	±2 mm
Side-to-side	Adjust slide position via oval slots.	±1.5 mm
Depth (Push Models)	Turn rear screw to move drawer front in/out.	±2.5 mm

Check that the drawer front is flush and level with the cabinet.

Refer to [Salice Futura Undermount Installation Guide](#) for precise details.



Step 6: Final Check

- Ensure the drawer slides smoothly and closes softly.
- Confirm all screws are tight and the drawer front is flush with the cabinet face.
- Make sure everything is leveled evenly.



Step 7: Confirm Before You Order

If you need help determining your slide type or calculating box dimensions, or installing our design team can help you verify everything before you order.



info@cabinetnow.com



1-855-669-5222

That's It!

You've installed your Salice Futura Undermount Drawer Slides — enjoy the smooth, quiet close!

Refer to [Salice Futura Undermount Installation Guide](#) for precise details.

