

# CabinetNow Installation Guide

## Featuring Salice Side-Mount Drawer Slides

Salice Side-Mount Drawer Slides are an economical and reliable choice for standard drawers, offering smooth  $\frac{3}{4}$ -extension movement with a built-in soft-close feel.

They're ideal for simplistic, visible installations, with runners mounted directly to the sides and bottom of the drawer box.

- Extension:  $\frac{3}{4}$  (partial extension)
- Clearance:  $\frac{1}{2}$ " (12 mm) on each side of drawer box
- Visibility: Side and bottom of the drawer box
- Sold as: Bagged sets (left and right slides + mounting brackets)
- Load Capacity:
  - Dynamic (moving): 30 kg ( $\approx$ 75 lb)
  - Static (at rest): up to 100 lb

### Tools Needed

- Salice 208 Side-Mount Drawer Slides (one pair per drawer)
- Mounting brackets (included)
- #6 (3.5 mm) flat-head screws
- Drill and drill bits (2.5 mm for pilot holes or 10 mm for dowel type)
- Measuring tape
- Pencil
- Level



Refer to [Salice Side Mount Assembly Guide](#) for precise details.




## Step 1: Measure and Prepare the Drawer

Before you begin, check that your drawer and cabinet opening have the correct spacing:

- Drawer width = Cabinet opening width – 1" total (½" clearance per side)
- Minimum inside cabinet clearance height: 17.5 mm (≈11/16") above and below slide line.
- Ensure the drawer box and cabinet are square and parallel for smooth operation.

*Tip: Because side-mount slides are visible, keep edges clean and hardware level for a polished finish.*

Need help calculating? Refer to our [Drawer Box Measuring Guide](#) for exact measuring instructions.

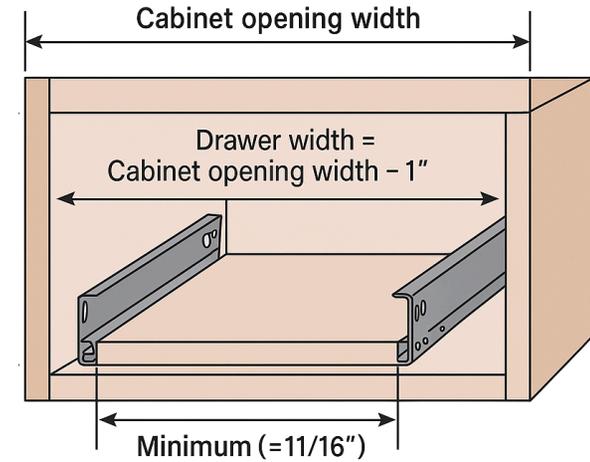


## Step 2: Install the Cabinet Runners

- Measure 17.5 mm (≈11/16") up from the bottom of the cabinet and mark your runner line.
- Place each slide against the inside cabinet wall.
- Fasten with TSP #6 (Ø3.5 mm) screws through the pre-drilled mounting holes.
- Check that both runners are perfectly level and parallel to each other.

*Optional (Knock-In Version):*

- Drill Ø10 x 11 mm or Ø8 x 11 mm holes.
- Insert the dowel-mounted runners and tap gently until snug.

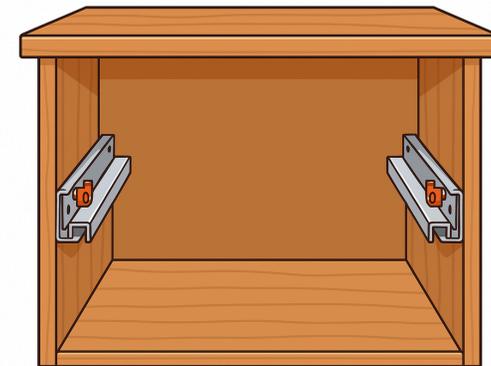


Refer to [Salice Side Mount Assembly Guide](#) for precise details.




### Step 3: Attach Slides to the Drawer Box

1. Position each drawer slide flush with the bottom edge of the drawer box.
2. Allow a 1/2" (12 mm) gap between the drawer and cabinet wall for each side.
3. Fasten using #6 (3.5 mm) screws through the holes on the runner.
4. Make sure the slides are even on both sides and parallel with the drawer bottom.

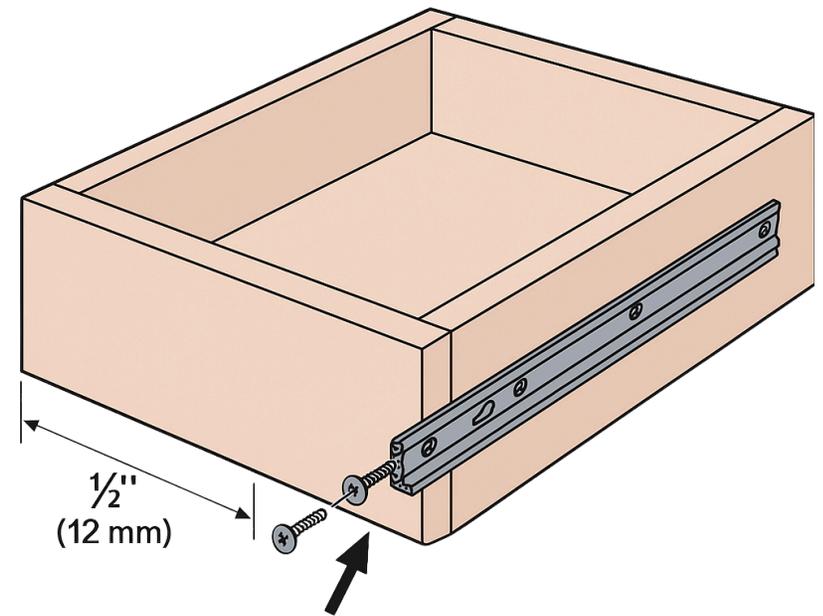

### Step 4: Insert the Drawer

- Align the drawer slides with the cabinet-mounted runners.
- Carefully slide the drawer in until the safety stops click.
- Open and close the drawer several times to ensure smooth travel.
- If the drawer binds or tilts, loosen the screws slightly, realign, and retighten.

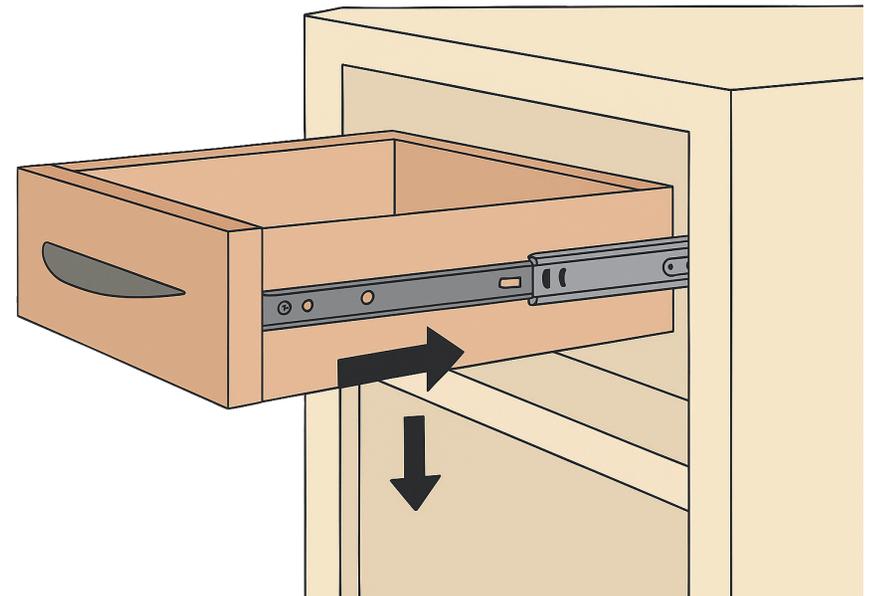


Refer to [Salice Side Mount Assembly Guide](#) for precise details.




## Step 5: Final Check

- Confirm the drawer glides open smoothly and closes softly.
- Ensure all screws are tight.
- Check that the drawer front sits flush with the cabinet face.
- The visible side-mount slides should be even and symmetrical on both sides.

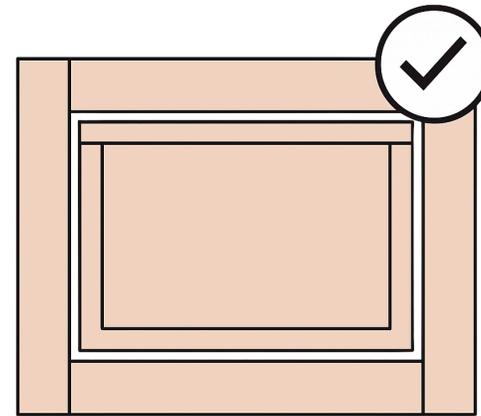

## Product Highlights

- $\frac{3}{4}$ -extension movement — smooth and stable without full pull-out.
- Automatic closing during the final 60 mm of travel.
- Double safety stop prevents accidental pull-out.
- Visible, economical design that suits simple and functional cabinetry.
- Optional “SILENT” version available for quieter motion.
- Available in screw-mount or knock-in dowel options for quick installation

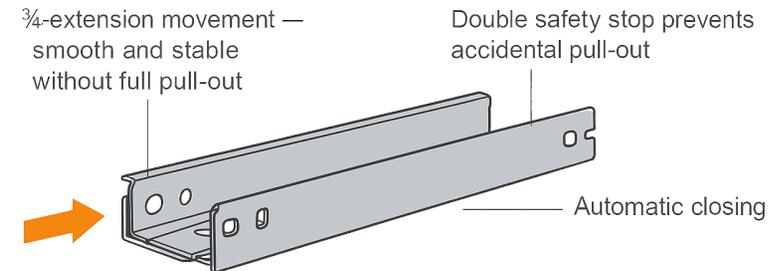

## Confirm Before You Order

If you need help determining your slide type or calculating box dimensions, or installing our design team can help you verify everything before you order.

 [info@cabinetnow.com](mailto:info@cabinetnow.com)  1-855-669-5222

**That's It!**

**You've installed your Salice Side-Mount Drawer Slides — enjoy the smooth, quiet close!**

**CabinetNow**  
Premium Custom Cabinetry in 10 Days

info@cabinetnow.com  
1-855-669-5222

Want to work with a pro for free? Fill out our Free Quote & Design Consult form to be connected to a rep!

<https://www.cabinetnow.com/free-quote-and-design-consultation/>

