

Cabinet Drawer Box Measuring Guide

Measuring for your new cabinet drawer box couldn't be easier. With a few basic tools and some careful measurement, you'll be ready to place your order and create the kitchen of your dreams. You don't even need to hire a professional. Are you ready to get started? Let's begin.


Required Tools



NOTE PAD



PENCIL

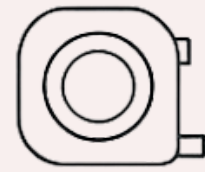

TAPE MEASURE

Step-by-Step Measuring

1. Measure your cabinet box opening to the nearest 1/16".
2. Record your measurements carefully on your note pad. Be sure to record your measurements as width x height. Ex. width 14" x 30" height.
3. Subtract slide specifications for accurate drawer sizing:

- **Width** = cabinet opening width – specifications for drawer slides
- **Height** = cabinet opening height – specifications for drawer slides
- **Depth** = cabinet opening depth – recommendation of hardware specification for distance adjustment

4. Account for Drawer Glide Clearance

To determine your final drawer box width, height, and depth you'll need to subtract clearance based on the specification of drawer slide you're using.

Each brand and model requires slightly different spacing to ensure smooth motion and proper fit.


- **If you're using hardware purchased elsewhere:**

Refer to the manufacturer's specifications and installation instructions for the exact clearance required.

- **If you'll be purchasing your drawer slides from CabinetNow:**

Use our **Drawer Glide Compatibility Chart** on page 2 for the correct subtraction values for the hardware we offer.

 **Note:** The compatibility chart applies only to CabinetNow's available hardware, including our Blum Tandem plus Blumotion, Salice Futura Undermount, and Salice Side-Mount drawer slides.

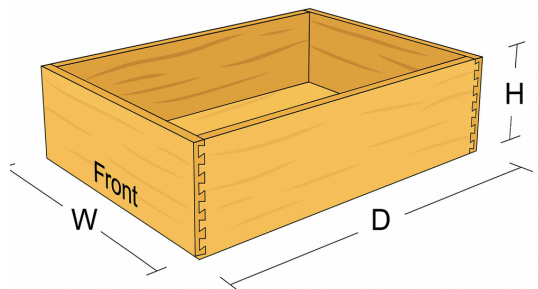

Example:

Cabinet Opening Width = 15"
Drawer Side Thickness = 1/2"
Deduct 5/8" total (for slides)
Drawer Box Width = 14 3/8"

As always feel free to contact us for any questions at info@cabinetnow.com or give us a call at 1-855-669-5222.

Made in the USA | Crafted to **1/8"** Precision | cabinetnow.com



Drawer Glide Compatibility Chart

Product Name	How to Size Drawer Box			
	Width	Height	Depth	Notch Required
Blum Tandem plus Blumotion	- 5/8	- 13/16	Same as Drawer Box Depth	1 3/8
Blum Tandem plus Blumotion	- 5/8	- 13/16	Same as Drawer Box Depth	1 3/8
Blum Tandem plus Blumotion	- 5/8	- 13/16	Same as Drawer Box Depth	1 3/8
Blum Tandem plus Blumotion	- 5/8	- 13/16	Same as Drawer Box Depth	1 3/8
Salice Side Mount Drawer Guide	-1	- 11/16	-1	None
Salice Side Mount Drawer Guide	-1	- 11/16	-1	None
Salice Side Mount Drawer Guide	-1	- 11/16	-1	None
Salice Side Mount Drawer Guide	-1	- 11/16	-1	None
Salice Side Mount Drawer Guide	-1	- 11/16	-1	None
Salice Side Mount Drawer Guide	-1	- 11/16	-1	None
Salice Side Mount Drawer Guide	-1	- 11/16	-1	None
Salice Futura Undermount	- 5/8	-1	Same as Drawer Box Depth	1 3/8
Salice Futura Undermount	- 5/8	-1	Same as Drawer Box Depth	1 3/8
Salice Futura Undermount	- 5/8	-1	Same as Drawer Box Depth	1 3/8
Salice Futura Undermount	- 5/8	-1	Same as Drawer Box Depth	1 3/8
Salice Futura Undermount	- 5/8	-1	Same as Drawer Box Depth	1 3/8



Ready to Order? Fill out this order form and submit to info@cabinetnow.com.

Important: Enter the final drawer box dimensions you want us to build. Do not list cabinet openings.

Need help determining your drawer box sizes? Contact our team at info@cabinetnow.com

[illegible]